



AME International's 1-Year Limited Warranty

AME International products are warranted against defects in material and workmanship for one year from the date of purchase. The product must be operated, maintained and installed according to the instructions and procedures provided, or this warranty is void. Any modification or wrongful use of the product will also void this warranty. AME International's obligation under this warranty is limited to the repair or replacement of defective products. For more information or to inquire about this warranty, please contact our office @ 352-799-1111 or email sales@ameintl.net.




Models 67601 & 67751 Break-A-Way Torque Wrench

WARNING: IMPORTANT SAFETY INFORMATION ENCLOSED. READ THIS MANUAL BEFORE OPERATING TOOL. IT IS THE RESPONSIBILITY OF THE EMPLOYER TO PLACE THE INFORMATION IN THIS MANUAL INTO THE HANDS OF THE OPERATOR. FAILURE TO OBSERVE THE FOLLOWING WARNINGS COULD RESULT IN INJURY.

WARNING: IMPORTANT SAFETY INFORMATION ENCLOSED. READ THIS MANUAL BEFORE OPERATING TOOL. IT IS THE RESPONSIBILITY OF THE EMPLOYER TO PLACE THE INFORMATION IN THIS MANUAL INTO THE HANDS OF THE OPERATOR. FAILURE TO OBSERVE THE FOLLOWING WARNINGS COULD RESULT IN INJURY.

Models 67601 & 67751 Break-A-Way Torque Wrench Instructions


- Using a 22 MM wrench, adjust the torque measurement to the desired torque.

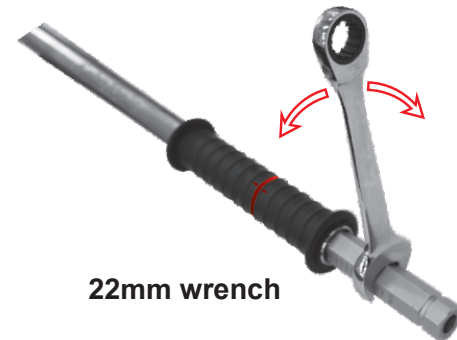

- To avoid inaccurate torque, do not fully remove the nut.



- The handle should align with the desired torque.

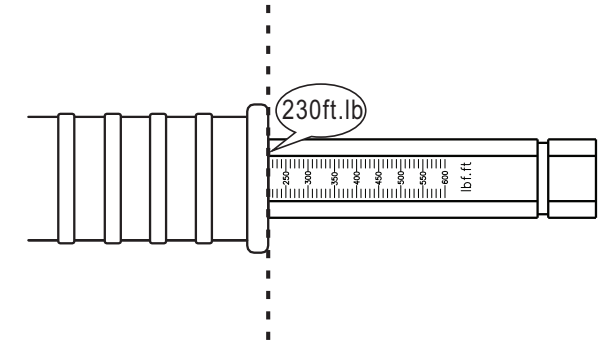

! Do not use this wrench as a hammer or pry bar.



To torque, grasp the handle and push downward. A break-a-way indicates that the desired pre-set torque has been met.



Lubricate three points frequently.



! To avoid inaccurate torque or damage to the tool, do not install unnecessary extensions.

- Torque wrench mechanism will break-a-way when desired torque is met. Do not continue to apply pressure after desired torque is met.