For the BVA-360P version equipped with the printer.

To access, or change the printer paper, lift up on the release latch in the middle of the printer door to open. Remove any leftover paper, then drop in a new roll with the end of the paper coming out from under the roll, toward the bottom of the tester. With a little paper sticking out through the paper slot in the door, you can gently push the door closed until it clicks. Order replacement paper, AutoMeter AC-127 (24 per pack).





Replacement Parts:

AC-31 - Adapter for Group 31 Batteries

AC-74 - Side Terminal Adapter

AC-122 - Optional Charging Dock

AC-124 - Replacement Lead Set

AC-127 - Replacement Thermal Paper - 24 pack

AC-140 - Replacement Wall Outlet Charger

R3-D - Battery Reset Adapter

*See Owners Manual for additional instructions & features.

For any Questions or Service, Service (815) 899-0801 Toll Free (866) 883-TEST (8378)



BVA-360/360P Professional Hand-Held Battery & Electrical System Analyzer

WARNING!

This device is only to be used on 12V electrical systems. Not for use on high voltage electrical systems

- Checks 6 & 12 volt batteries.
- Performs starting and charging test on 12V systems.
- Unit is rechargeable: Includes charging & storage dock.
- The BVA-360P has a built in printer, for printing test results for the customer.
- Built in infrared battery thermometer (just aim the back of the tester at the battery during a test).



To Power On: Push & hold the power button for 1 second.


To Put to Sleep: Push and hold the power button for about 2 seconds. The word "Sleep" will flash once on the screen, then you can let go of the button. To Wake the tester, push and release the power button


To Power Off: Push & hold the power button for about 5 seconds. The words "Power Off" will flash once on the screen, then you can let go of the button.


To Perform a Test: Choose <u>Full System Test</u> to test a Battery, Starting, and Charging System on a vehicle.


Choose <u>Battery Test</u> to perform a Battery-Only Test, in or out of the vehicle. Simply follow the prompts after each selection. See the first two screen examples below for a Battery Test. You may also choose Starting Test or Charging Test for an individual starting or charging test.


The tester clamps must be connected to corrosion free, and clean, lead or brass battery terminals, or post adapters securely tightened onto the battery terminal. DO NOT CONNECT THE BATTERY CLAMPS TO THREADED STEEL BATTERY STUDS. Failure to follow this instruction may affect the test results. Adapters for group 31 batteries are included with this tester.

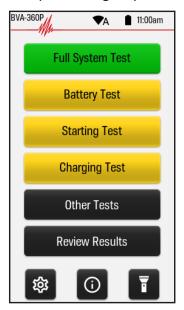


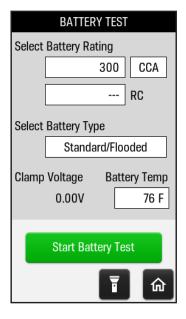


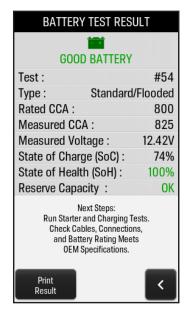

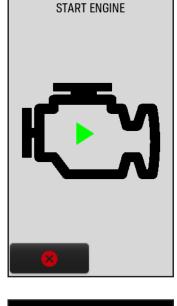

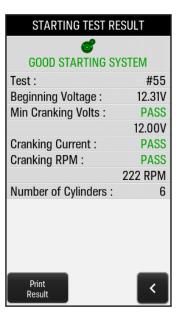

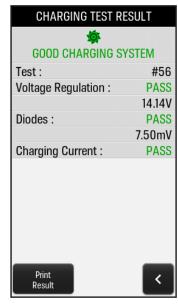

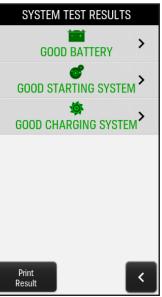

- At the end of any Test you have the option to print the test results. (with the BVA-360P version)
- To Review Previous Tests: Simply touch the Review Results button on the home page. This tester will store up to 1,000 tests. You may print any existing test results (with the BVA-360P version) from the Review Results page.



The BVA-360 should be plugged in when not in use.

