



Operator's Manual

10896



Giant Bead Breaker



15270 Flight Path Drive • Brooksville, FL 34604
Phone (352) 754-1117 • Toll Free (800) 352-9852 US, Canada and Caribbean Only • Fax (352) 754-4508
www.esco.net • sales@esco.net

RESPONSIBILITY OF THE OWNER AND/OR THE END USER OF THIS DEVICE

This manual is an integral part of the BEAD BREAKER and must always accompany it, also in the case of its sale.

The owner and/or the end user of the BEAD BREAKER must follow the instructions for its use and the suggestions of the manufacturer, before using it. If the end user does not understand very well the language of this manual, instructions must be read and explained in his mother tongue, being sure that he understands their meaning.

The manufacturer is not liable for any damage to persons or things due to incorrect use of this BEAD BREAKER.

OPERATION

Connect the hydraulic pump (manual or air) to the bead breaker through the quick-couplers. If you use the air/hydraulic pump, you must connect it to a source of compressed air of 100-120 psi. (See *separate manual of the air/hydraulic pump!*)

Test the beadbreaker before you attach it to the rim. Release all air from tire, remove cap and valve and the valve extension included. Verify that the tire is completely deflated!



ATTENTION! DANGER!

IT IS ABSOLUTELY FORBIDDEN to use the bead breaker with inflated tyres.



ATTENTION! SAFETY REGULATIONS

- a) Always deflate tyres before starting disassembling operations
- b) Use the proper tools
- c) Always use protection means (accident-prevention shoes, etc.)
- Do not forget that there are always crushing risks!
- d) Lock the safety rods on articulated vehicles.
- e) Safety valve is set and sealed by the manufacturer.

It is absolutely forbidden to tamper with it and change its calibration.

The INCOMPLIANCE or these INSTRUCTIONS can cause damages and/or breakage to the BEAD BREAKERS with consequent damages to persons and things.

MAINTENANCE:

Check the tools before their use. In case of oil leaks, replace the seals.

For pump maintenance, see its instruction manual.

CHECKS

a) a visual control must be carried out every time you want to use the BEAD BREAKER, checking leaks, damages, missing or loose parts, worn parts, etc.

b) all the BEAD BREAKERS must be carefully checked if it has suffered a damage or a clash.

We suggest that skilled personnel yearly check the bead breaker and that all defective parts, worn parts etc. are replaced by using original spare parts supplied by the manufacturer (see spare parts list)

DAMAGED TOOLS

All damaged tools, worn tools or incorrectly operating ones **MUST BE PUT OUT OF ORDER**. We suggest that necessary repairs are carried out by skilled personnel authorised by the manufacturer.

BEAD BREAKER SCRAPPING

When your bead breaker, after many years of use, must be scrapped, you must remove oil from the cylinder and from the pump. Oil must be recycled according to the regulations in force.

Parts list

Index	Description	Size, mm	Q'ty	Index No.	Description	Size, mm	Q'ty
1	Screw	M6x35	1	12	Ram piston		1
2	Washer		2	13	Pilot ring		1
3	Tie-in assy.	3/8"-18	1	14	Bound ring		1
4	Cylinder		1	15	Toe housing		1
5	return spring assy.		1	16	Table pin		1
6	Snap ring	32	1	17	Toe body		1
7	Washer		1	18	Screw	M6x90	1
8	O-ring	39x4.6	1	19	Toe		1
9	Sealing washer		1	20	Top cap		1
10	Piston ring		1	21	Snap ring		1
11	O-ring	31.5x3.55	1	22	Screw		1

Parts Breakdown

