



## Calibration Procedure – DIGITAL WALL MOUNTED TIRE INFLATOR Model #10964

**NOTE:** Make sure the inflation unit is **disconnected** from the power supply before starting Step 1.

**Step 1:** Connect the inflator **Inlet** to a >100 PSI air source.

### Step 2:

Press and hold the Target pressure control buttons (“+” and “-”) on the faceplate of the 10964 Inflator.



### Step 3:

Turn on the inflator and when the LCD display shows “06A” code release control buttons (“+” and “-”)



### Step 4:

Press the “i/SET” unit option button until the “CAL” code is shown on the inflator’s LCD display.



### Step 5:

Connect the inflator **Outlet** to a second stable >100 PSI air source.



### Step 6:

The current air pressure will be shown on the inflator's LCD display.



### Step 7:

Once the air pressure reading is steady and holding its position press the “i/SET” unit option button once on the inflator.



The display screen will show a reading of “**100 PSI**”, at this point shut off the air source and calibration is complete.