




Model JMB-UMB Universal Mobile Base

Stock No. 708118

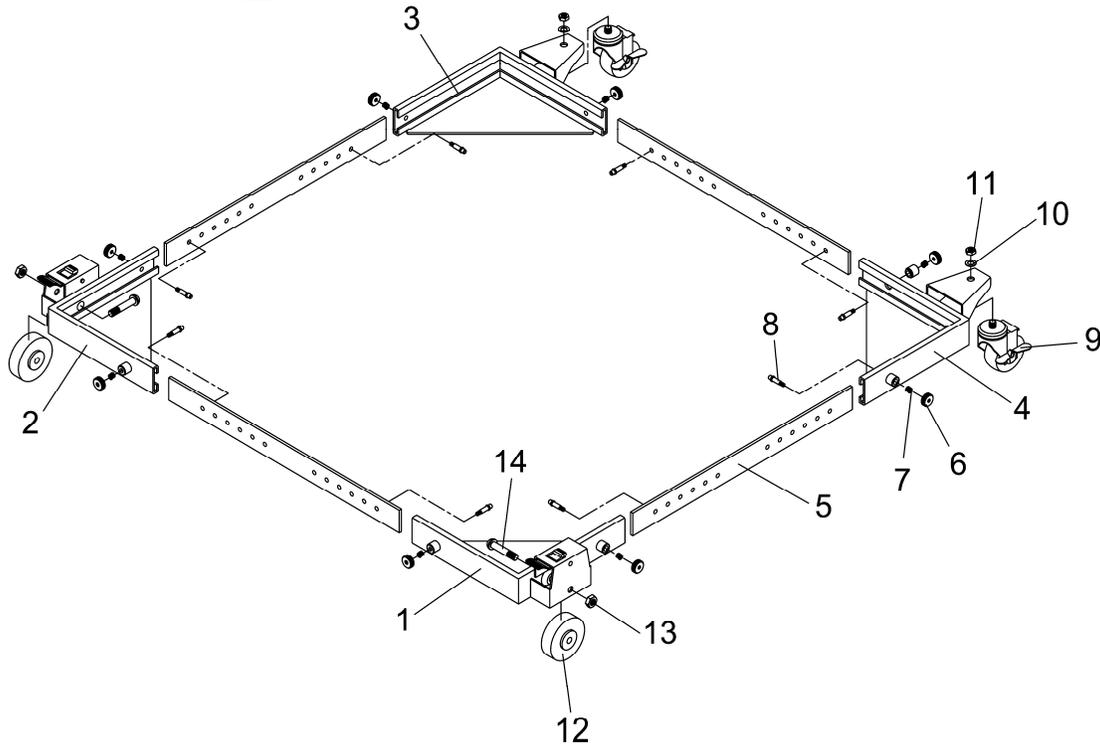

Ind	Part No	Description	Qty
1	JMBUMB-01	Fixed Castor Bracket (R)	1
2	JMBUMB-02	Fixed Castor Bracket (L)	1
3	JMBUMB-03	Swivel Castor Bracket (L)	1
4	JMBUMB-04	Swivel Castor Bracket (R)	1
5	JMBUMB-05	Side Adjusting Plate	4
6	JMBUMB-06	Knob	8
7	JMBUMB-07	Spring	8
8	JMBUMB-08	Index Pin	8
9	JMBUMB-09	Swivel Castor	2
10	TS-0720091	Lock Washer (3/8")	2
11	TS-0570031	Hex Nut (3/8"-16UNC)	2
12	JMBUMB-12	Fixed Wheel	2
13	TS-0640091	Lock Nut (3/8"-16UNC)	2
14	JMBUMB-14	Bolt (Special) (3/8"x2-3/16")	2

WARNING All mobile base castors should be locked unless the machine is being moved. Do not move the mobile base while the machine has power, or is plugged in. All four mobile base castors should always be locked while the machine is being used.

1. Pull out the spring-loaded knob (#6) and slide the side adjusting plate (#5) into the castor bracket assembly (#4).
2. Locate spring-loaded pin into one of the indexing holes found in the side adjusting plate.
3. Position the machine so that it rests evenly on the corner brackets.
4. Lock four castors by stepping on the brake pedals. Unlock by flipping the pedal up with your foot.

To order parts, call our service department at 800-274-6848 Monday through Friday, 8:00 a.m. to 5:00 p. m. CST Having the Model Number and Stock Number available will allow us to serve you quickly and accurately

JET
427 New Sanford Road
LaVergne, Tennessee 37086
Ph.: 800-274-6848
www.jettools.com

WARNING: This product can expose you to chemicals including lead and cadmium which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to <http://www.p65warnings.ca.gov>.

Part No. M-708118
Revision B3 09/2018
Copyright © 2014 JET