


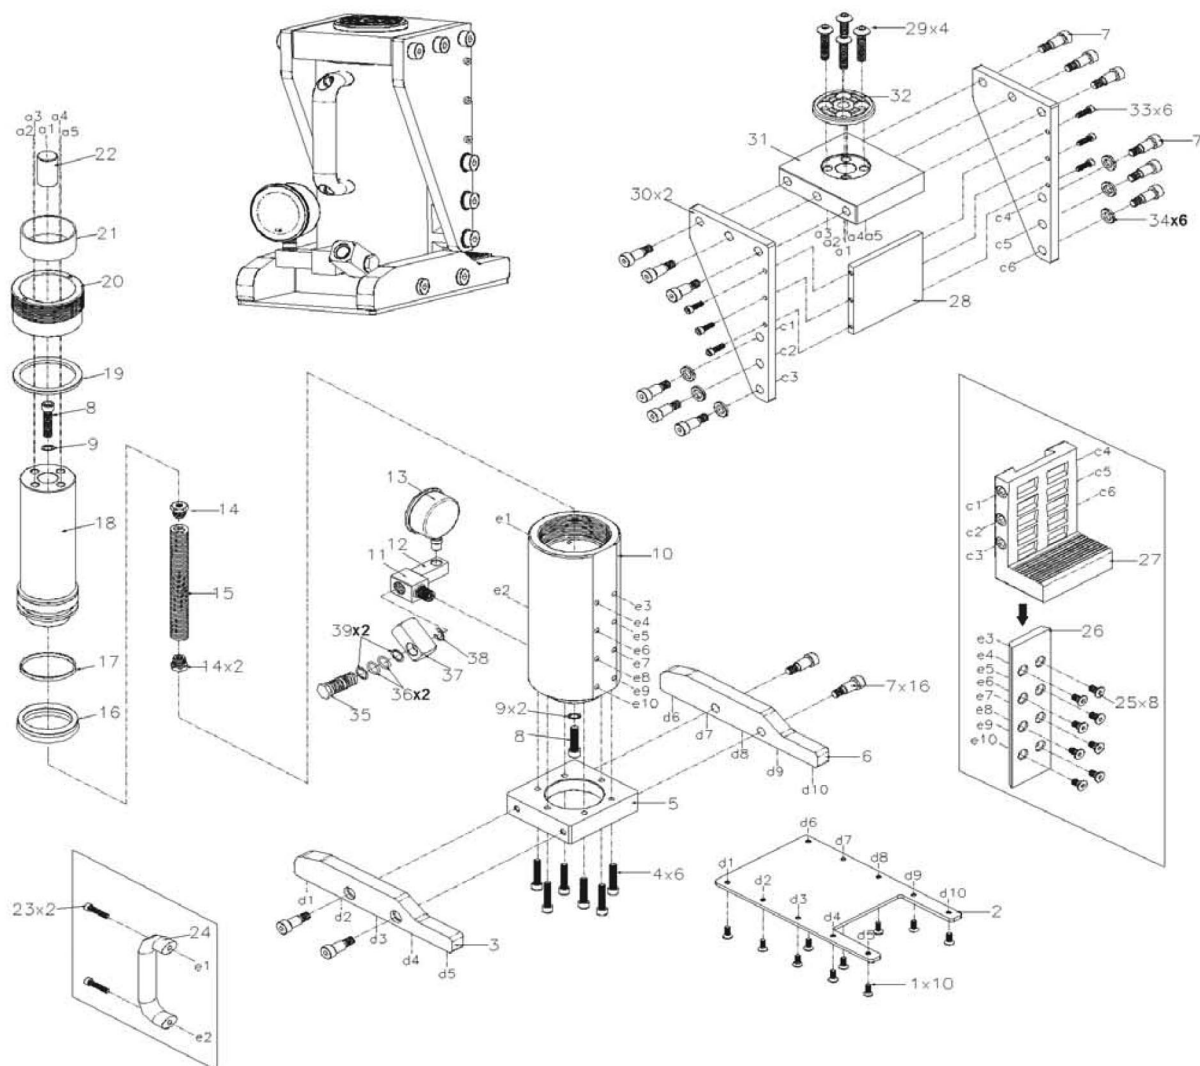

Part	Description	Part	Description	Part	Description
1	Screw M6 x 16L	14	Screw Bushing	27	Toe Plate
2	Base Plate	15	Spring	28	Supporting Plate
3	Base Supporting Plate (Right)	16	Bushing	29	Screw M10 x 55L
4	Screw M10 x 35L	17	Back Up Ring	30	Side Plate
5	Cylinder Base Plate	18	Piston Rod	31	Top Plate
6	Base Supporting Plate (Left)	19	Wiper Seal	32	Top Saddle
7	Screw	20	Retaining Ring	33	Screw M6 x 30L
8	Screw M8 x 40L	21	Wiper Sleeve	34	Washer
9	Washer	22	Saddle	35	Swivel Pressure Bolt
10	Cylinder	23	Screw M6 x 25L	36	Packing
11	Cylinder Port Adapter	24	Handle	37	Swivel Adapter
12	Gauge Adapter	25	Screw M8 x 20L	38	C-Ring
13	Gauge	26	Load Plate	39	Snap Ring