



Parts List

ZNP-10P

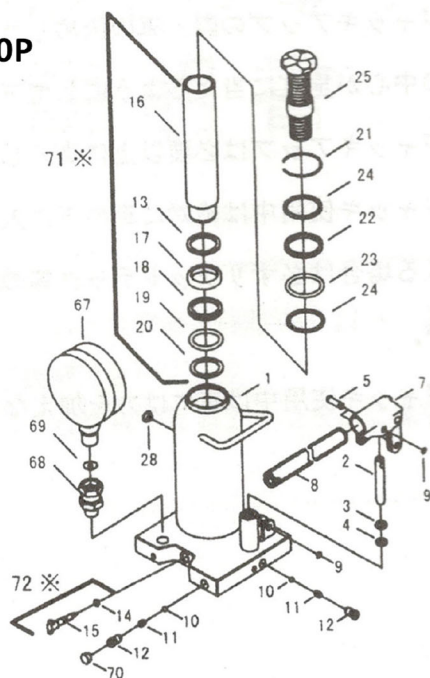

ZNP-20P

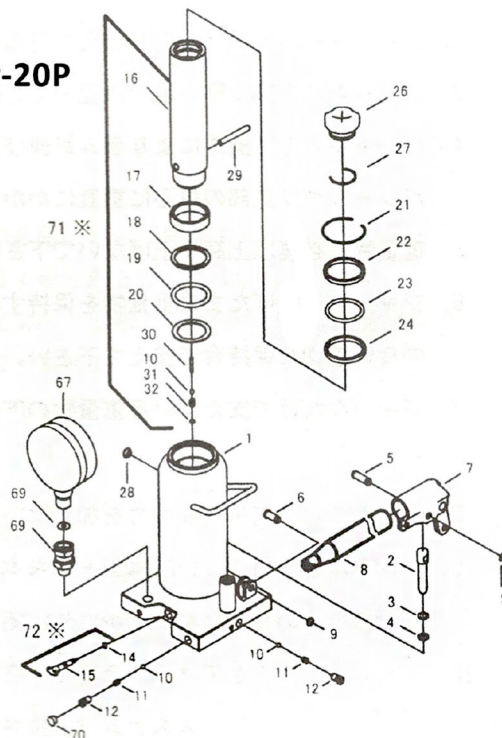

Number	Description	Number	Description
1.	Body Assy	19.	Ram Packing
2.	Pump blunger	20.	Ram Packing Stopper
3.	Pump Backup Ring	21.	Snap Ring
4.	Pump Packing	22.	Stuffing Ring
5.	Pump Plunger Pin	23.	Cylinder Packing
6.	Pump Stay Pin	24.	Stopper Ring
7.	Handle Socket Assy	25.	Adjusting Screw Assy
8.	Handle	26.	Supporting Plate
9.	Snap Ring / Push Nut	27.	Snap Ring
10.	Valve Ball	28.	Oil Plug
11.	Valve Spring	29.	Horizontal Pin
12.	Valve Plug	30.	Vertical Pin
13.	Push Nut	31.	Ram Spring
14.	Release Packing	32.	Ram Spring Stopper
15.	Release Assy	67.	Pressure Gauge
16.	Ram	68.	Gauge Seat Assy
17.	Ram Packing Seat	69.	Packing
18.	Ram Backup Ring		