

# 90° POWER UNIT BRACKET INSTRUCTIONS



*PU-BRACKET-90DEGREE*



Start with the 13mm bolts originally supplied with your power unit. Install them to the column bracket as shown with one nut tightened.

Attach the 90° bracket to the power unit as shown, using the new supplied 10mm bolts, nuts and washers.

(These new bolts will not utilize the threaded holes in the bracket, so it is necessary to tighten the nuts)

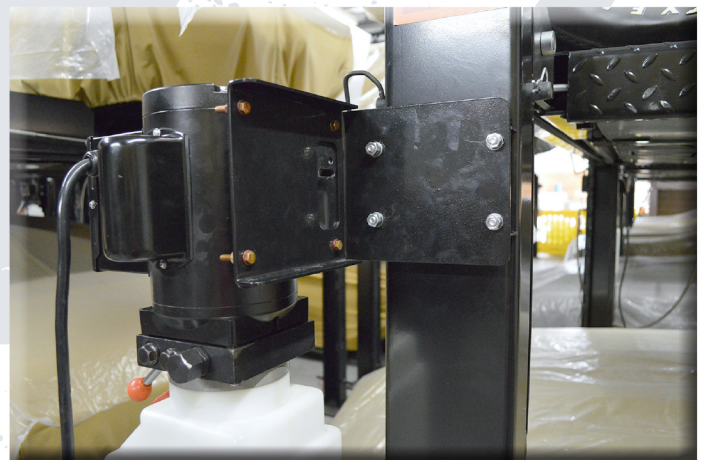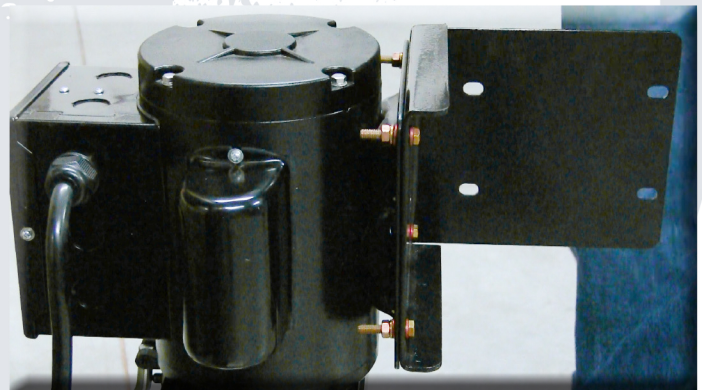

Lift and mount the power unit with the 90° bracket onto the column bracket in either of the positions shown. Tighten the nuts of the 13mm bolts and the installation is complete!