


Innovative RO Holder™

Assembly Instructions

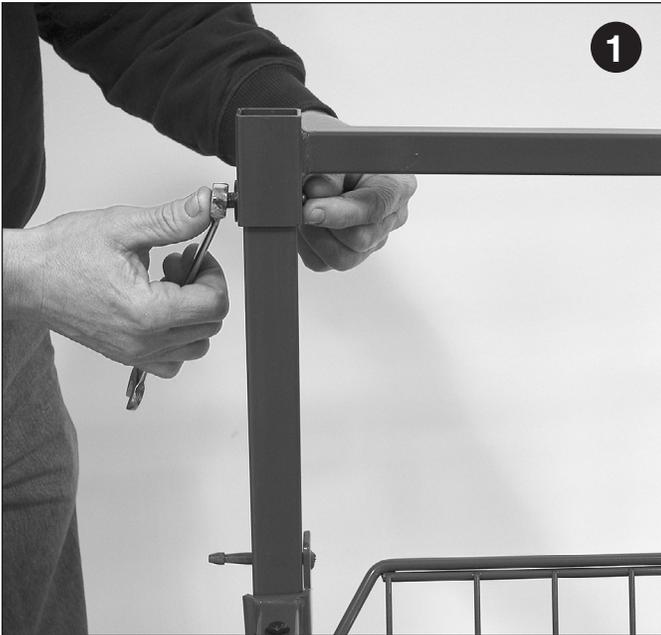

Remove 3/8" hex bolt from upper frame support.



Insert RO Bracket (P/N 290-40) into upper frame support. Reinstall 3/8" hex bolt and tighten.



Set RO Holder onto RO Bracket and tighten hand knob to any desired location. Insert dry erase marker as shown into RO Bracket.



SuperStorage Parts Cart RO Holder

