


Installation / Maintenance

STATIC ZAP

Filter Media Replacement

Part # DF-EZAP

Replace the filter media as follows:

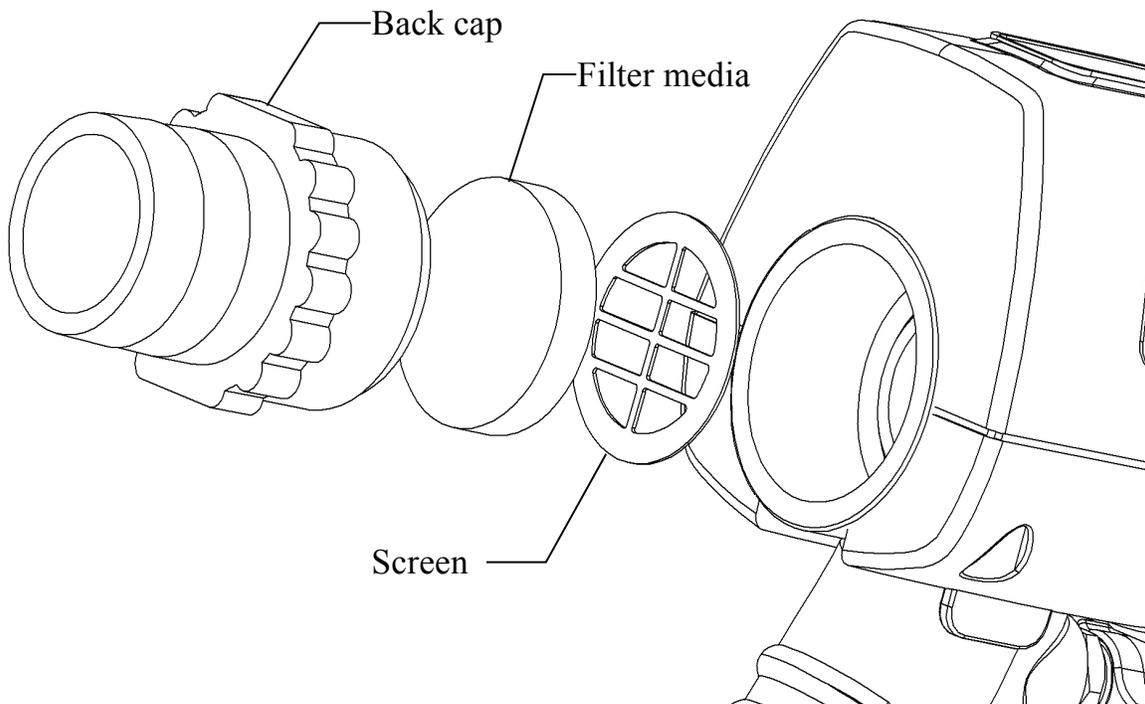

1. Remove the back cap of the StaticZAP, by turning it counter-clockwise.
2. Remove filter media and screen.
3. Place screen and new filter media in back cavity.
4. Attach the back cap to the StaticZAP. Cap to be hand tight, do not over tighten.

Note: If the air directional cylinder falls out during the filter change, put the cylinder back in with the arrow for air flow pointing toward the front of the blow gun.



1611 W. 135th St / Gardena, CA 90249-2505
PHONE 310 349 1940 / EMAIL info@dentfix.com / WEB www.dentfix.com